



Firmware - How can I upgrade firmware on 2N® VoiceBlue Lite?

You need to use serial or USB cable. Then connect your gateway with configuration tool, go to the firmware/license menu. There choose your firmware file and click „Upgrade Firmware“

More product information:

[2N® VoiceBlue Lite \(Official Website 2N\)](#)