


Static IP address - How to set up static IP address in 2N® Access Commander


2N® Access Commander (linux based installation) is using DHCP server to obtain IP address by default. If you don't have DHCP server in your network or if you require to set static IP address for your linux based installation of 2N® Access Commander, then you need to do following:

Open virtual machine which is running linux based installation of 2N® Access Commander.


Select Advanced Menu

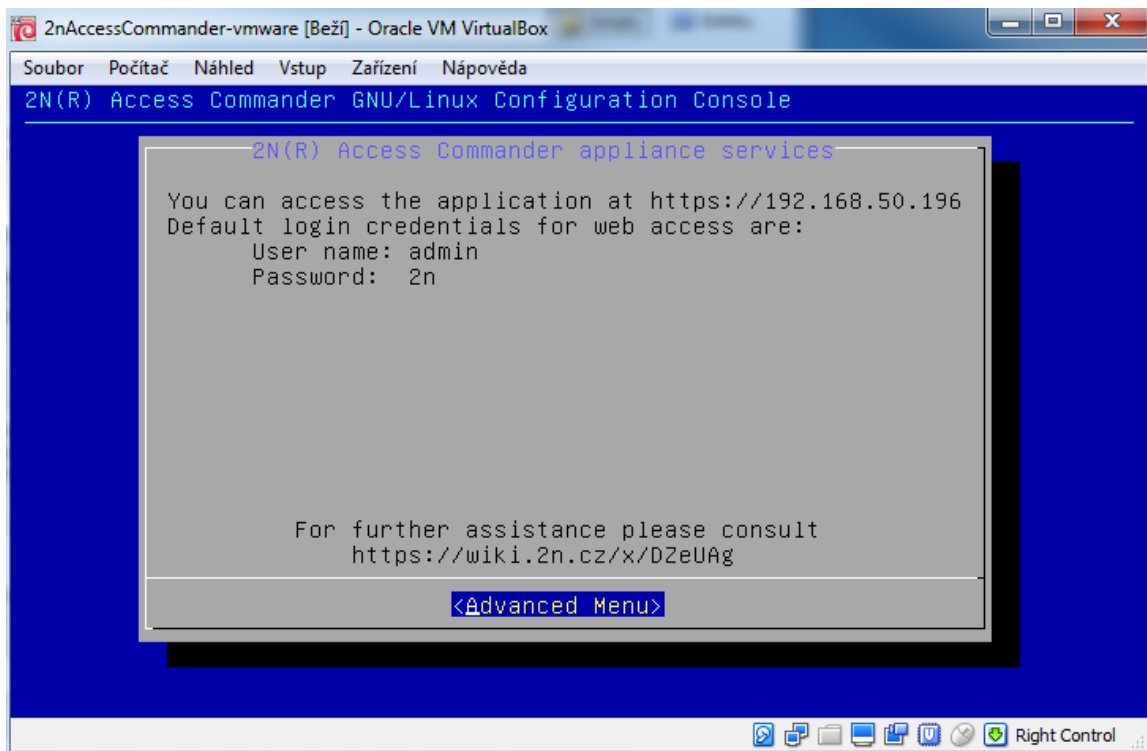

Choose Networking

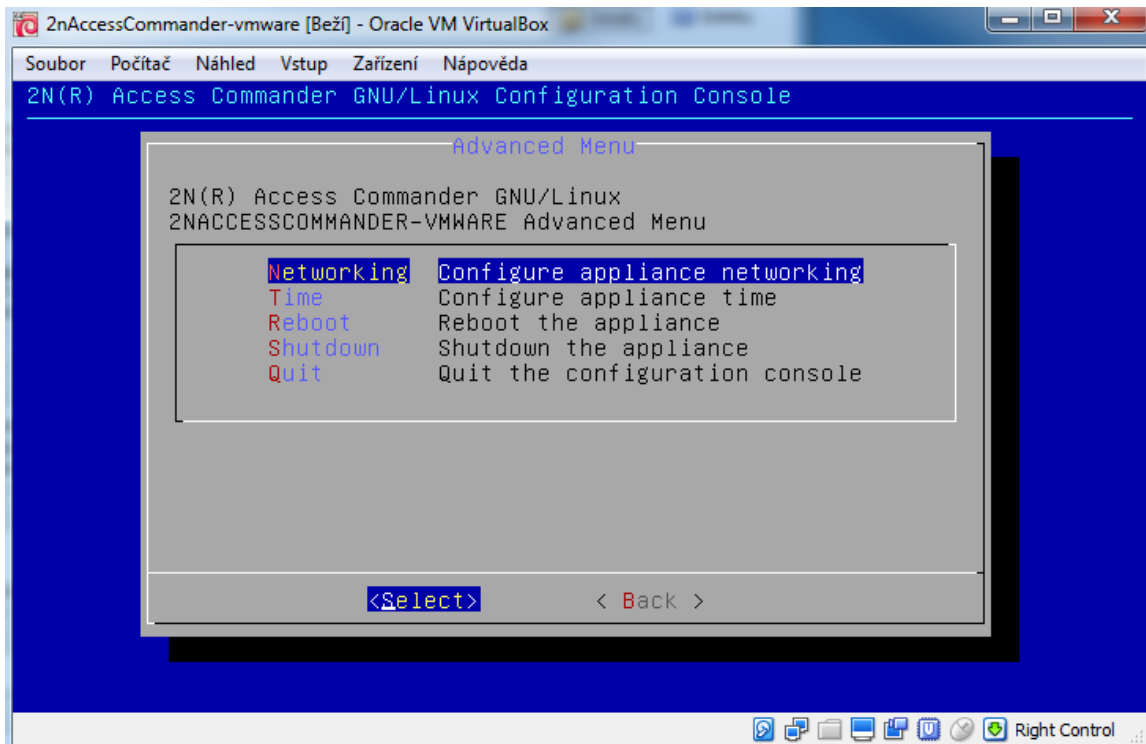

Select StaticIP

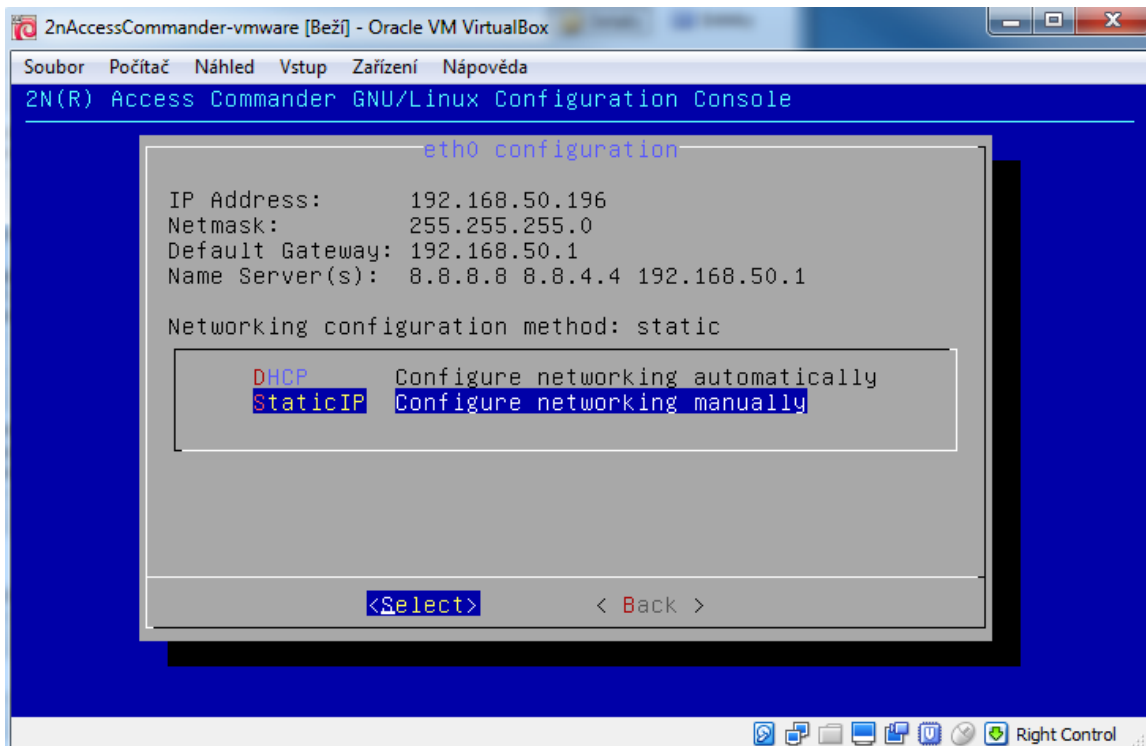

Set requested IP and Apply settings

