



















2N® VoiceBlue Lite EN

2N® VoiceBlue Lite








>> Configuration tips & tricks



-  Call routing - How can I route all incoming calls to receptionist or operator?
-  Call routing - How many simultaneous calls can I do?
-  CDR - How can I delete CDR?
-  Configuration - How do I configure 2N® VoiceBlue Lite?
-  Configuration - How to set 2N® VoiceBlue Lite?
-  Credit check - How can I recognize an amount of credit on my SIM card?
-  Data transfer - Do 2N® VoiceBlue Lite gateways support data transfer?
-  Firmware - Can I use firmware 03.00.xx?
-  Firmware - How can I upgrade firmware on 2N® VoiceBlue Lite?
-  IP setting - How can I change the IP address of 2N® VoiceBlue Lite?
-  IP setting - How can I use NAT keep alive?
-  License - How can I use license key?
-  Mobility Extension - How can I configure Mobility Extension?
-  SMS messages - How can I send and receive SMS messages?

>> How to connect with 3rd party device

-  Alcatel OXO - How to interconnect with Alcatel OXO using SIP trunk
-  Cisco Call Manager - How to set 2N® VoiceBlue Lite with Cisco Call Manager
-  Common IP PBX - Can I use 2N® VoiceBlue Lite with my PBX?
-  Siemens HiPath 3000 - How to interconnect Siemens HiPath 3000 via SIP trunk

>> Troubleshooting

-  Audio - What can I do when call is connected but I can't hear any voice? (RTP packets are empty)
-  Audio - What should I do if I can't hear ringback tone?
-  Audio - What to check if I have one-way audio issue ?
-  Audio - What to check if I have voice quality issue?
-  Call disconnection - What to do if a call is not ended immediately?
-  Configuration Tool Download
-  Connection via HyperTerminal - How can I connect to VoiceBlue Lite using HyperTerminal?
- Technical issue - How to report an issue?

-  Trace - How to get a trace from VoiceBlue Lite?
-  Trace -How to make trace of call to VoiceBlue lite in Wireshark

