

# Factory reset - How to make a factory reset for 2N® Net Audio devices

In some cases, it may be useful to reset the 2N® Net Audio Decoder factory values using the RESET button on the back panel. Do this, for example, if 2N® Net Audio Decoder ceases to respond, which may be caused by incorrect LAN settings, LAN configuration changes, forgotten password and so on.

All 2N® Net Audio device are equipped with a reset button

For 2N® Net Audio Decoder a 2N® Net Audio Decoder lite:

Resetting Procedure:

- a. Use a thin rigid tool to press the RESET button on the back panel.
- b. Keep the RESET button pressed (for approx. 15 s).
- c. Release the button as soon as the LED starts shining violet.

This operation takes about 50 s. Do not disconnect the device from power supply during this period.

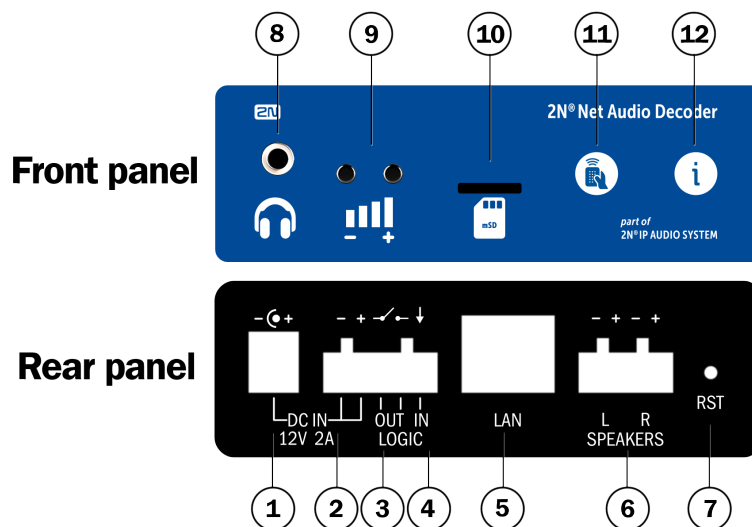


Figure: 2N® Net Audio Decoder - Front and Rear Panel

7. RESET button

For 2N® Net Audio Encoder

Resetting Procedure:

1. Use a thin rigid tool to press the RESET button on the lower panel.
2. Keep the RESET button pressed for 10 s.


3. Release the button.

This operation takes about 50 s. Do not disconnect the device from power supply during this period.

For 2N® Net Speaker

Resetting Procedure:

1. Turn RESET button to the right
2. Keep the RESET button in this position (around 15 seconds)
3. Turn RESET button to the left as soon as the LED starts shining violet.

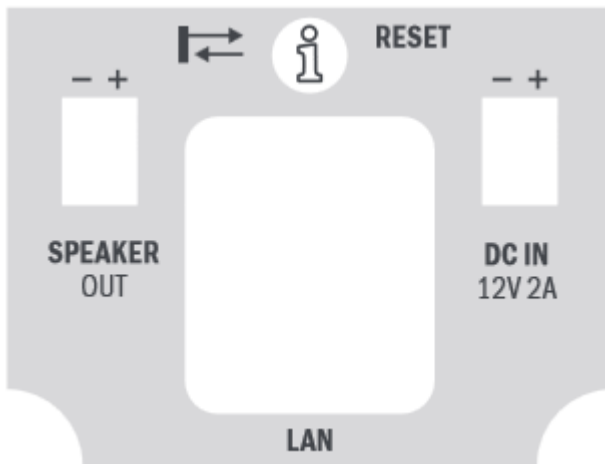

For 2N® Net Mic

Resetting Procedure:

1. Use a thin rigid tool to press the RESET button on the lower panel.
2. Keep the RESET button pressed for 10 s.
3. Release the button.