


# !Firmware Upgrade - Jak provést upgrade FW brány 2N® BRI Lite/Enterprise

1. Visit our website [www.2n.cz](http://www.2n.cz) and download FW for 2N® BRI Lite or BRI Enterprise
2. Open web interface of your GW and go to the section Management->Firmware update. Select the FW file you downloaded in the previous step and upload it to the GW.

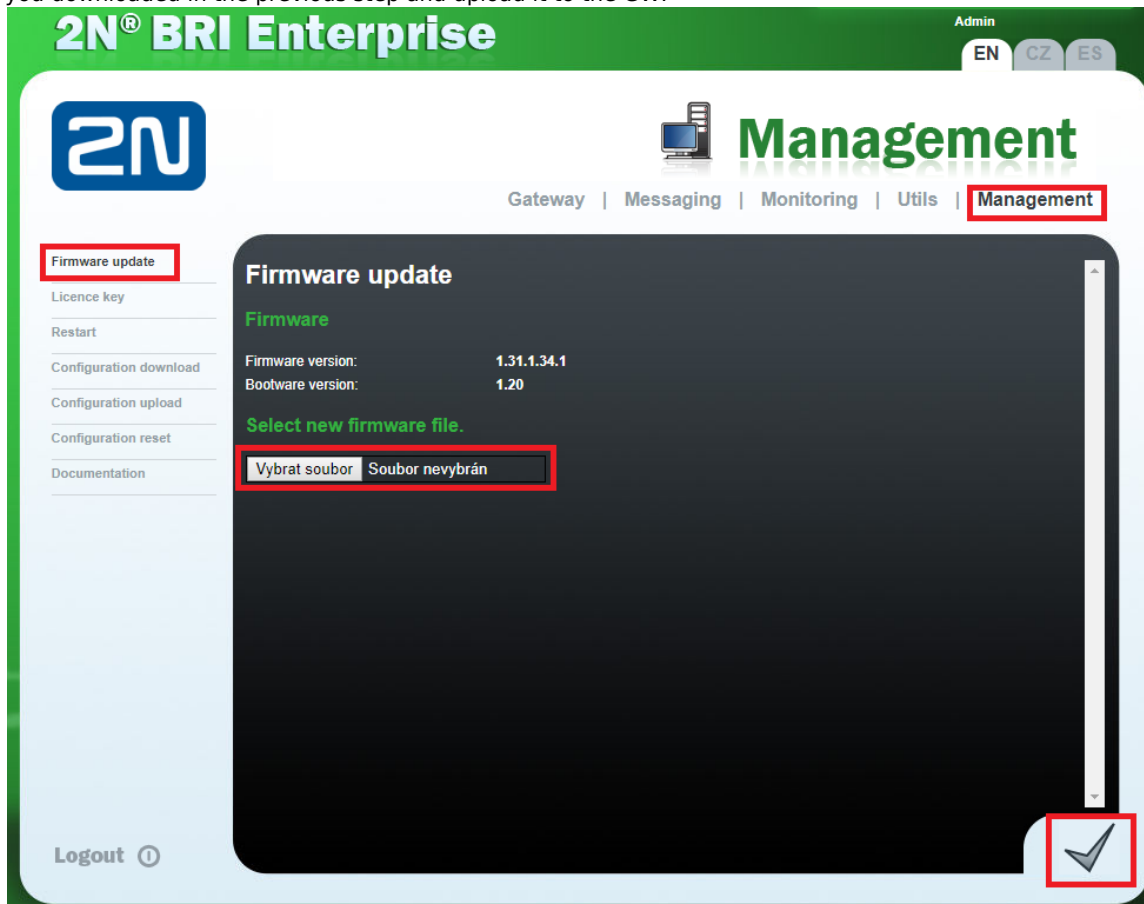

The screenshot displays the web management interface for a 2N BRI Enterprise gateway. The page title is "2N® BRI Enterprise" and the user is logged in as "Admin". The interface is in English (EN). The main navigation menu includes "Gateway", "Messaging", "Monitoring", "Utils", and "Management". The "Management" section is active, and the "Firmware update" sub-section is selected. The "Firmware update" page shows the current "Firmware version" as 1.31.1.34.1 and the "Bootware version" as 1.20. Below this, there is a section titled "Select new firmware file." with a file selection interface. The "Vybrat soubor" (Select file) button is highlighted with a red box. A "Soubor nevybrán" (File not selected) message is also visible. A "Logout" button is located in the bottom left corner. A checkmark icon in the bottom right corner indicates a successful operation.

3. GW will reboot, after reboot you can check in the same section whether the update was successful as you can see the FW version there.