


# CLIP - Incoming CALL ID transfer to phone or PBX

**i** The CLI transmission is via FSK which must be supported by connected PBX or phone. (CLI transmission with DTMF protocol is not supported)


Go to Gateway Configuration/FXS Interface:

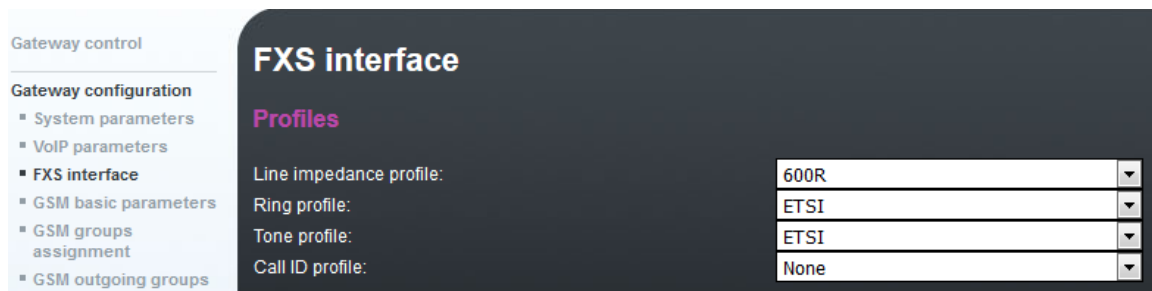

The screenshot shows the 'FXS interface' configuration page. On the left is a navigation menu with 'Gateway control' and 'Gateway configuration' sections. Under 'Gateway configuration', 'FXS interface' is selected. The main content area is titled 'FXS interface' and 'Profiles'. It contains four dropdown menus:

Line impedance profile:	600R
Ring profile:	ETSI
Tone profile:	ETSI
Call ID profile:	None

Set Ring profile, Tone profile, Call ID profile to your country or to the closest country from the list. Example:

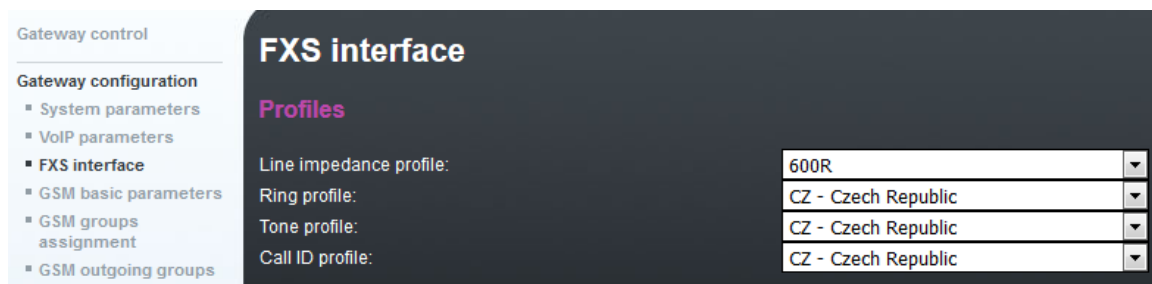

The screenshot shows the 'FXS interface' configuration page with the same navigation menu as above. The dropdown menus are now set to country-specific profiles:

Line impedance profile:	600R
Ring profile:	CZ - Czech Republic
Tone profile:	CZ - Czech Republic
Call ID profile:	CZ - Czech Republic