


I do not now the actual IP address of OfficeRoute

- Connect the OfficeRoute via USB cable and check the IP address
 - After connecting the USB cable to your PC, a new COM port will be installed. You can be asked for a driver (you can download it from <http://www.2n.cz/en/downloads/p=officeroute%7Ccategory=software>).
 - Connect to the OfficeRoute by some terminal software (hyperterminal or putty) via a new virtual COM port which will appear after OfficeRoute connecting. The communication speed is 921600.
 - Press Enter after connecting - the configuration will appear.

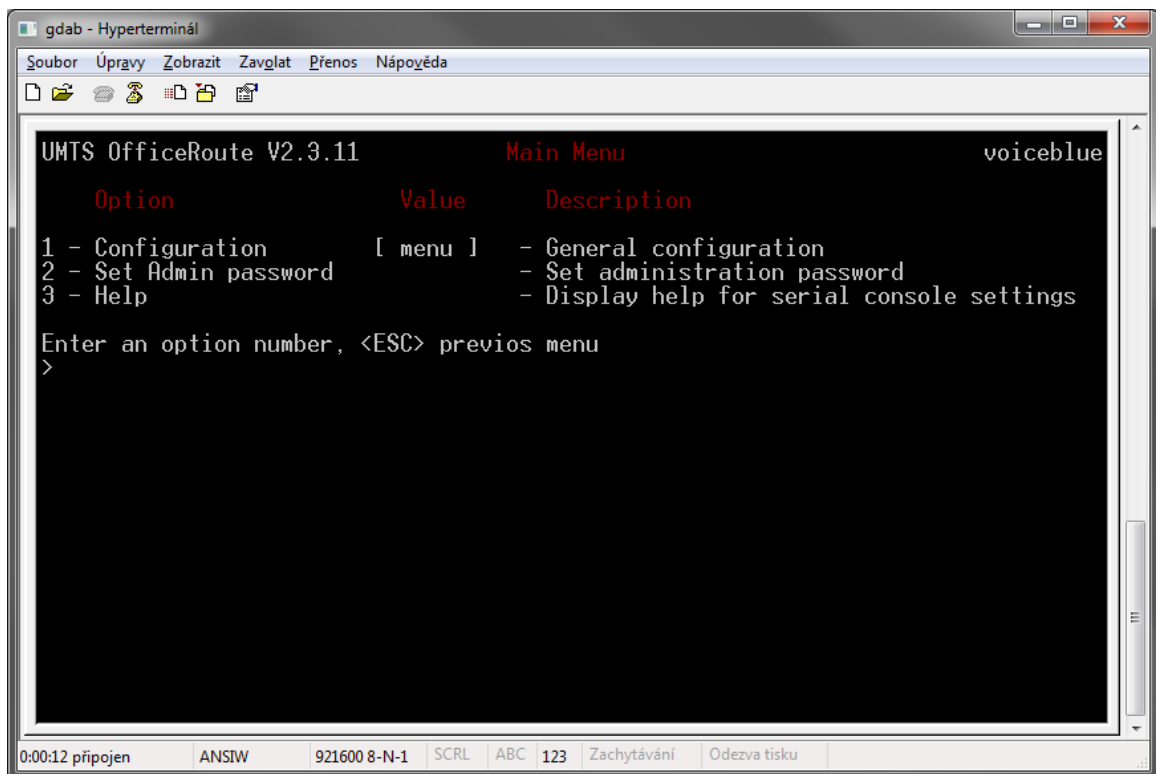

```
gdab - Hyperterminál
Soubor Úpravy Zobrazit Zavolat Přenos Nápověda
UMTS OfficeRoute V2.3.11 Main Menu voiceblue
Option Value Description
1 - Configuration [ menu ] - General configuration
2 - Set Admin password - Set administration password
3 - Help - Display help for serial console settings
Enter an option number, <ESC> previos menu
>
```

- Press 1 and go to the Configuration of the device. Press 1 again to enter the Network configuration
- The actual network configuration will appear - you can change the parameters by pressing particular numbers (1 for IP address, 2 for Network mask, etc)

More product information:

2N® OfficeRoute (Official Website 2N)