


!Firmware Update - How to do firmware update on 2N® VoiceBlue MAX?

1. Visit our website www.2n.cz and download FW for 2N® VoiceBlue MAX
2. Open web interface of your GW and go to the section Management->Firmware update. Select the FW file you downloaded in the previous step and upload it to the GW.

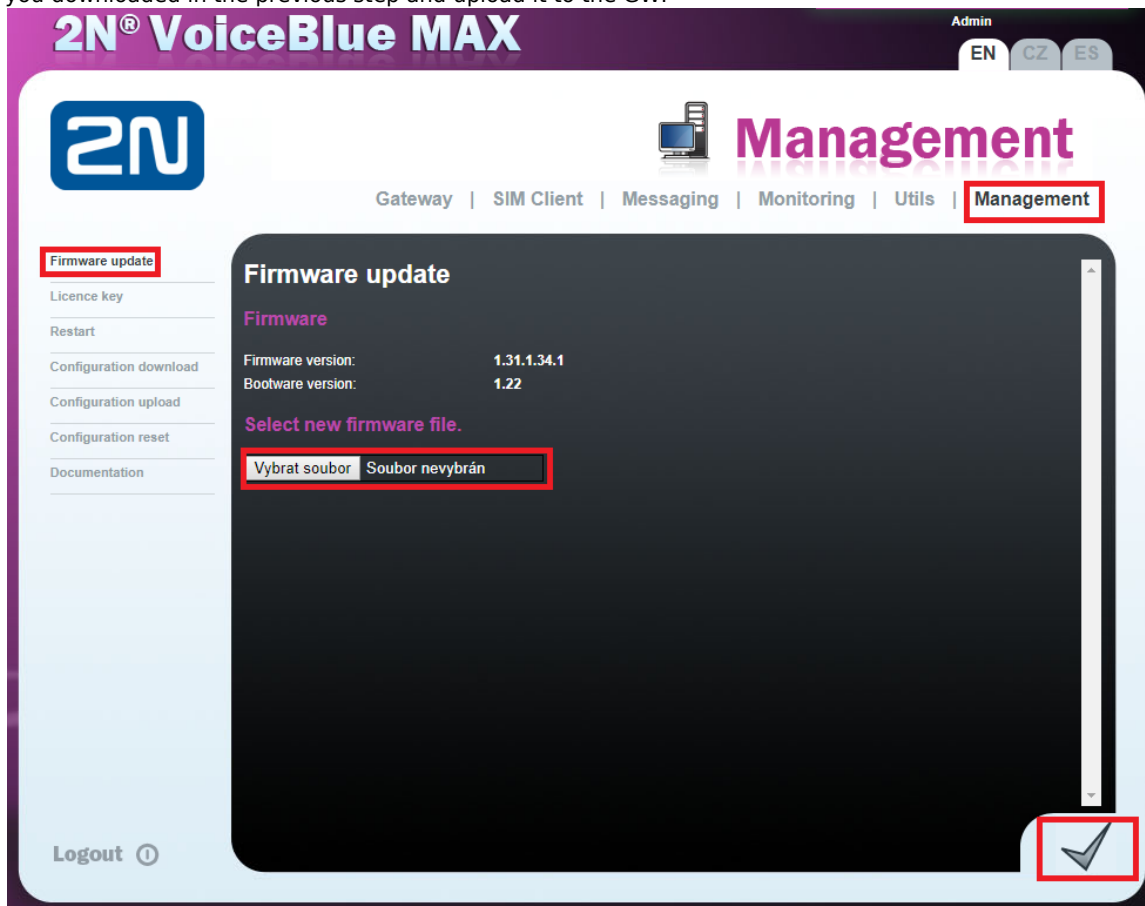

The screenshot displays the web management interface for a 2N VoiceBlue MAX gateway. The page title is "2N® VoiceBlue MAX" and the user is logged in as "Admin". The language is set to "EN". The main navigation menu includes "Gateway", "SIM Client", "Messaging", "Monitoring", "Utils", and "Management". The "Management" section is active, and the "Firmware update" sub-section is selected. The "Firmware update" page shows the current "Firmware version: 1.31.1.34.1" and "Bootware version: 1.22". Below this, there is a section titled "Select new firmware file." with two buttons: "Vybrat soubor" (Selected) and "Soubor nevybrán" (Not selected). A "Logout" button is visible in the bottom left corner, and a checkmark icon is in the bottom right corner.

3. GW will reboot, after reboot you can check in the same section whether the update was successful as you can see the FW version there.