



License - How can I use license key?

When you obtain license key for your gateway go to the menu Firmware/License. There you can see also status of actual license but when you want to upload a new, please fill the license key into "license key for the gateway" field.

More product information:

[2N® VoiceBlue Lite \(Official Website 2N\)](#)