


!Firmware Upgrade - How to make a firmware upgrade on 2N® StarGate or 2N® BlueTower?

1. Visit our website www.2n.cz and download FW for 2N® VoiceBlue Next
2. Open web interface of your GW and go to the section Management->Firmware update. Select the FW file you downloaded in the previous step and upload it to the GW.

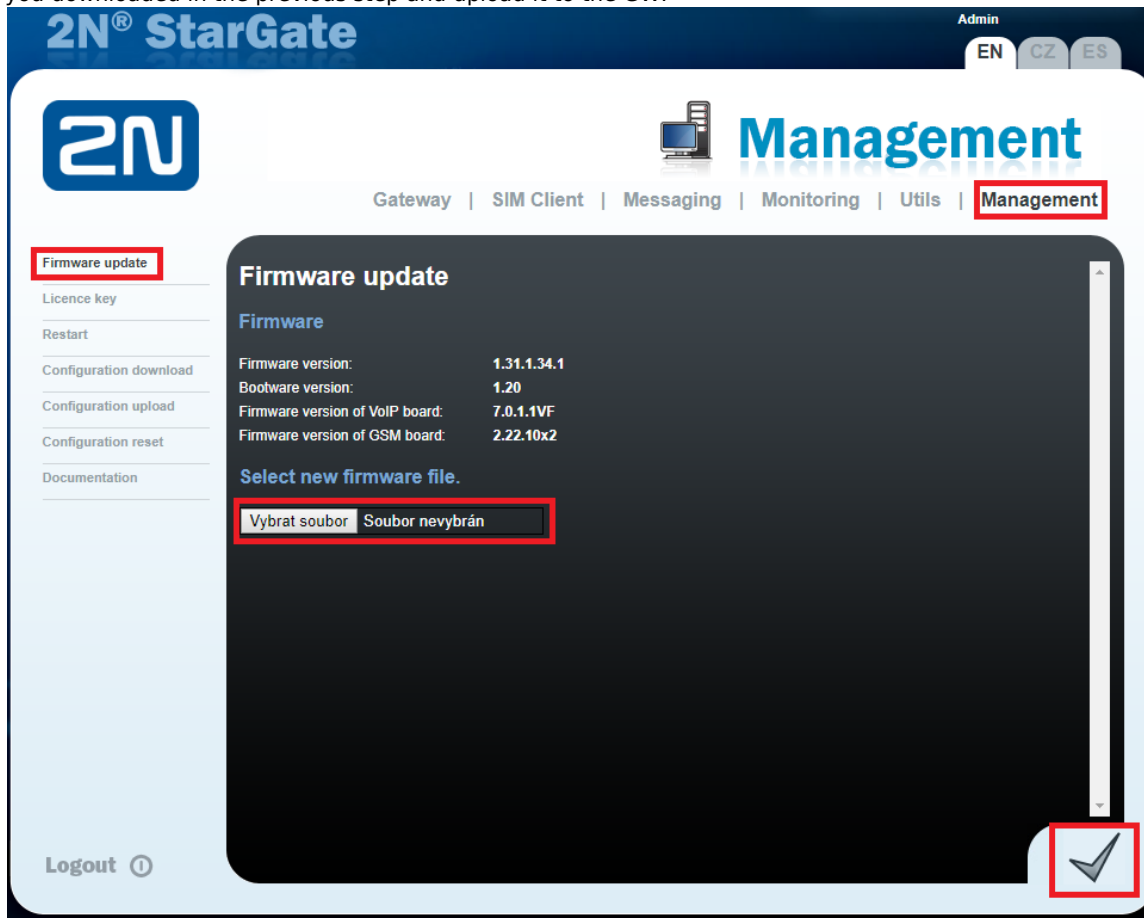

The screenshot displays the 2N StarGate Management web interface. The top navigation bar includes the 2N logo, the word "Management", and language selection buttons for EN, CZ, and ES. A secondary navigation bar lists "Gateway", "SIM Client", "Messaging", "Monitoring", "Utils", and "Management" (which is highlighted with a red box). On the left sidebar, the "Firmware update" option is also highlighted with a red box. The main content area shows the "Firmware update" section with the following details:

Firmware version:	1.31.1.34.1
Bootware version:	1.20
Firmware version of VoIP board:	7.0.1.1VF
Firmware version of GSM board:	2.22.10x2

Below the table, there is a section titled "Select new firmware file." with a file selection button labeled "Vybrat soubor" (highlighted with a red box) and a status indicator "Soubor nevybrán". In the bottom right corner of the main content area, there is a checkmark icon inside a red box, indicating a successful operation. A "Logout" button is visible in the bottom left corner of the interface.

3. GW will reboot, after reboot you can check in the same section whether the update was successful as you can see the FW version there.