


Hardware grounding - How to ground 2N® EasyGate and 2N® SmartGate

To ensure proper functionality, specially to avoid interference of the analogue line of 2N® EasyGate/SmartGate, proper grounding is needed. You can complete it through a left pin in the SMS input (Pic. 1) for new models of 2N® EasyGate PRO and 2N® SmartGate UMTS.

In case of an old version 2N® EasyGate/SmartGate use right pin in the SMS input!

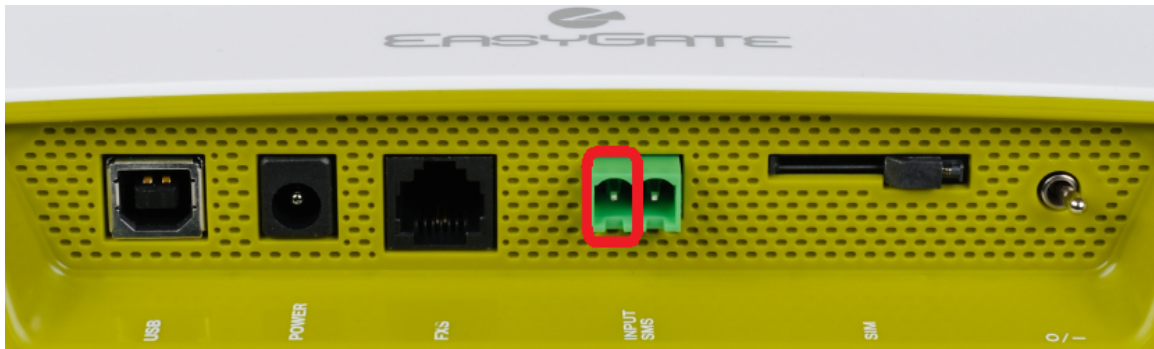

Pic. 1

More product information:
Analogue GSM Gateways ([Official Website 2N](#))
UMTS Gateways ([Official Website 2N](#))