

# !Static IP address - How to set up static IP address?

If you need to set a static IP address for your device, please proceed following instructions. Keep in mind that for further access to the web interface you will need to be in the same network range. The basic values and credentials are listed at the end of this document.

## How to setup a static IP address:

- Go to the section Gateway
- In the right column, click on the Gateway configuration / Ethernet configuration
- Unselect: Use DHCP
- Type an IP address, Subnet mask, Default gateway and at DNS server(s).



- Save settings





## Default Settings for Static IP Address:

IP address: 192.168.1.2

IP mask: 255.255.255.0

IP gateway: 192.168.1.1

Username: Admin

Password: 2n